


# Remote control pairing


**Pairing with TV:** (Two possibilities)

**1 - TV detected:** Your receiver may automatically detect your TV. The screen below indicates successful configuration.


*In this example, the TV set detected is an **LG** model (**GoldStar**).*

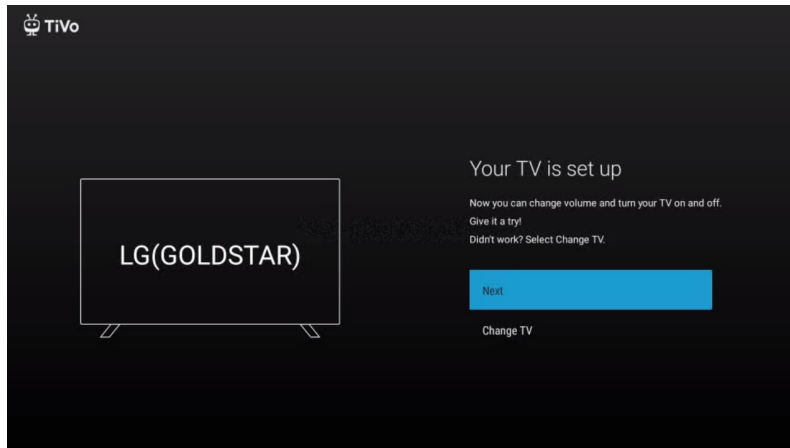


**2 - TV not detected:** Click **Next**

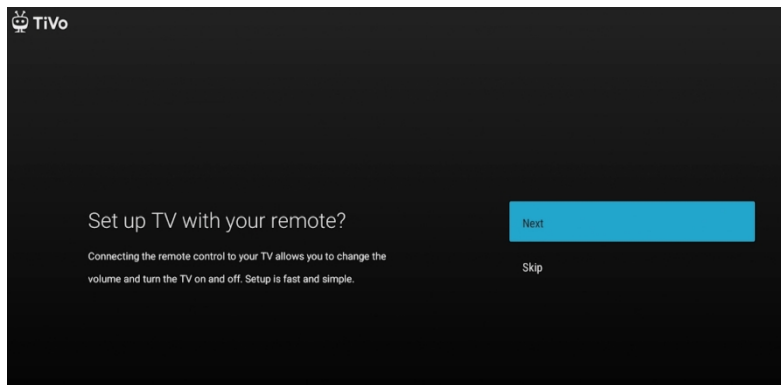


**Select the TV brand by clicking OK.**

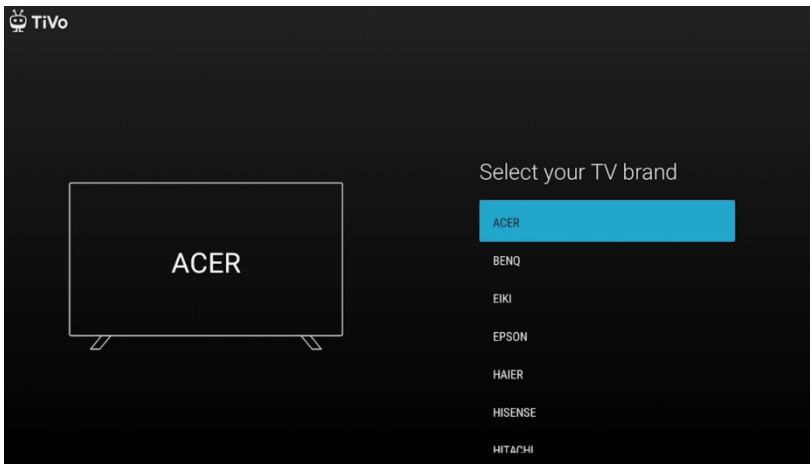


If the brand is not listed, click on **Other**.

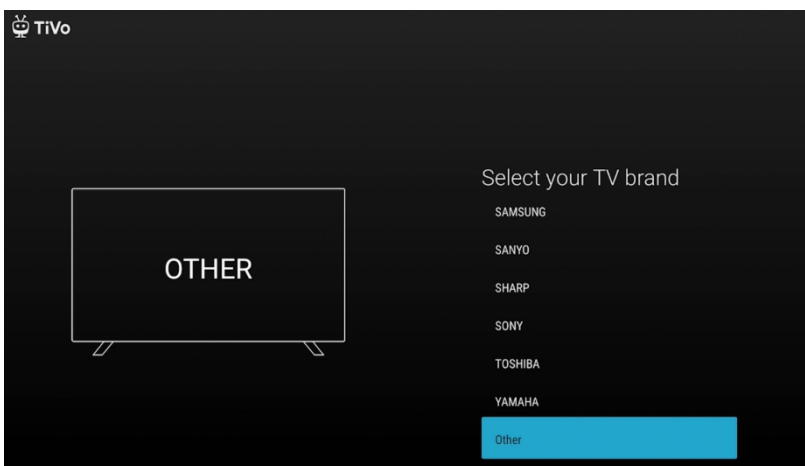


**Use the numeric keypad to find** the TV brand. Press the ✓ on the keypad to confirm your choice. Then press **OK** on the remote control to confirm your selection.

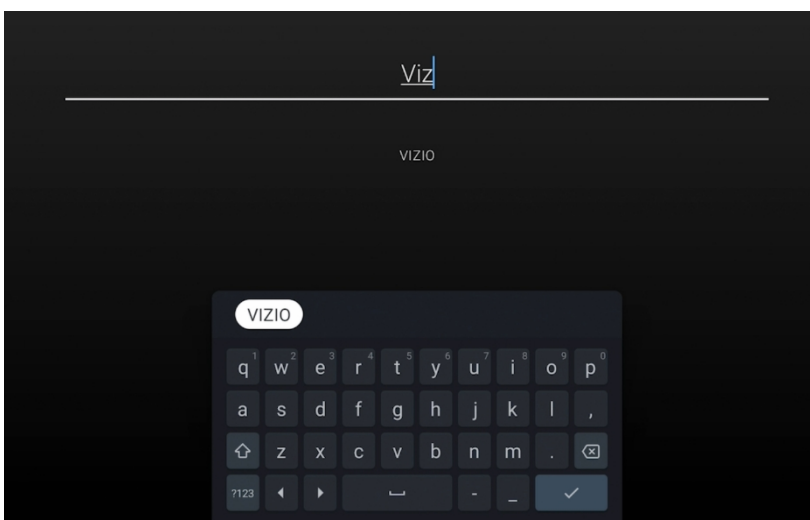

**Remote control test:** click on **Next**.

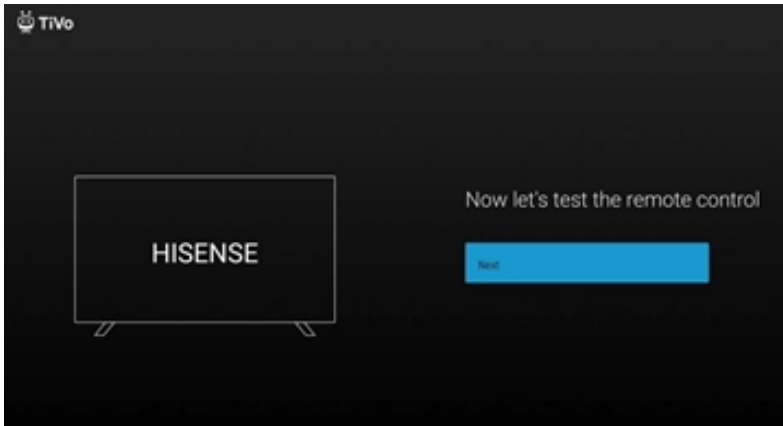

**Volume test:** press **OK**.

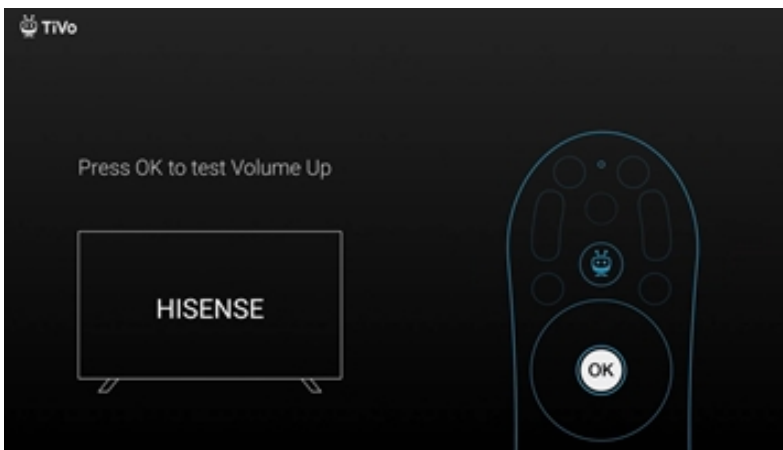

**Volume - confirmation:** if the sound increases, click **Yes**, otherwise **Try Again** or **No**.

**Note:** Several tests may be necessary, depending on your TV model. Don't hesitate to click **Try Again** if it doesn't work.



End pairing: click **Next**.

